


# Installation instructions

## PROFF ACOUSTIC PANELS





You will need a glue gun, FibroTech assembly adhesive, a spirit level, screwdriver, pencil and FibroTech black screws. We suggest you use cotton gloves when installing your product.

**Note:** Because of the amount of wood in the acoustic panels, they may smell a bit of wood. Therefore we recommend they are acclimatized before installation.

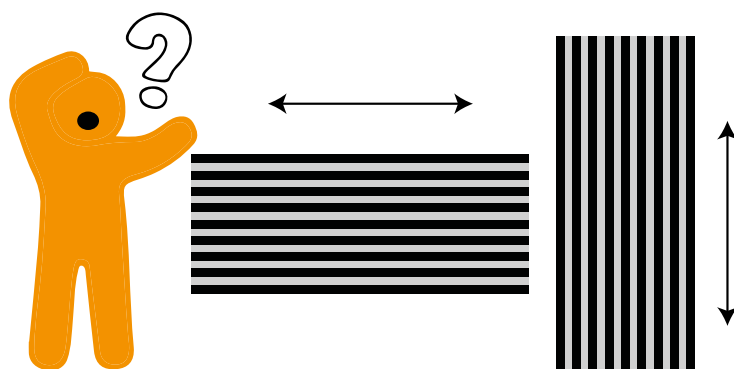

Decide in which direction you wish to install your acoustic panels. You can shorten them by using a fine-toothed saw on the back.

Apply glue on the back of the panels.

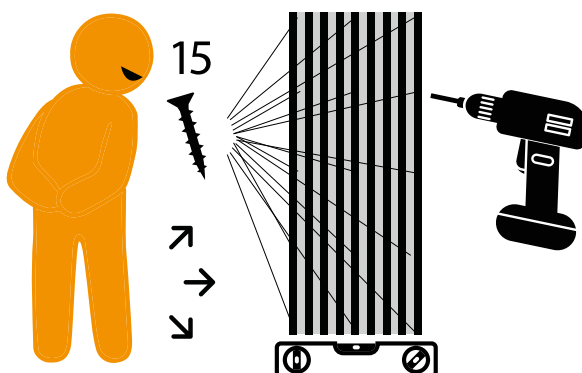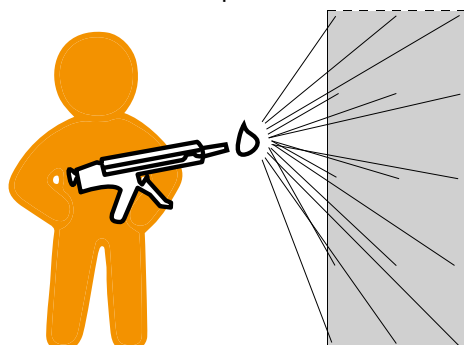

Use screws to install the acoustic panels on a wall or ceiling. You need 18 screws for each panel.


In case of shuttering, distance should be 600 mm.

Remember to hold onto wadding or solder.



Importer:  
TreeTops A/S

The mark of  
responsible forestry

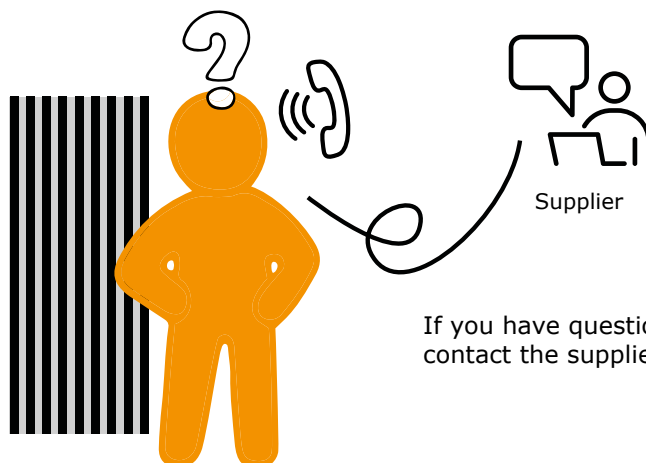

If you have questions,  
contact the supplier.